

**C10 (T) (TD)**  
**C15 (T) (TD)**  
**C15VSD (T) (TD)**  
**Rotary Screw**  
**Air Compressor**  
**Units**  
 - - -  
**Installation**  
**And**  
**Start-up Data**

<b>Contents:</b>	<b>Page:</b>
Quick Start .....	2
Safety Precautions .....	4
Unpacking and Inspection .....	5
Installation – Mechanical .....	6
Lubrication .....	8
Installation – Electrical .....	9
Start-up Procedures .....	12
Preventative Maintenance Schedule .....	13
Common Compressor Faults .....	15
Separator Filter & Refrigerated Air Dryer .....	19
Trouble-Shooting Guide .....	22
Warranty .....	25



**Please read this manual before installing or using your Air Compressor Unit. It contains valuable information that will help in the receiving, installation, use, and maintenance of the Unit.**

**Please keep this manual in a safe place for future reference.**

All of the information, policies, and procedures in this reference manual apply exclusively to DV Systems.

If you require assistance, please contact your local DV Systems Distributor or Authorized Service center. You may contact the manufacturer directly as follows:




Phone: (705) 728-5657  
 Web: [www.dvsystems.com](http://www.dvsystems.com)  
 Email: [sales@dvsystems.com](mailto:sales@dvsystems.com)



### Quick Start

### Mechanical Installation.

(Refer to Page 6)

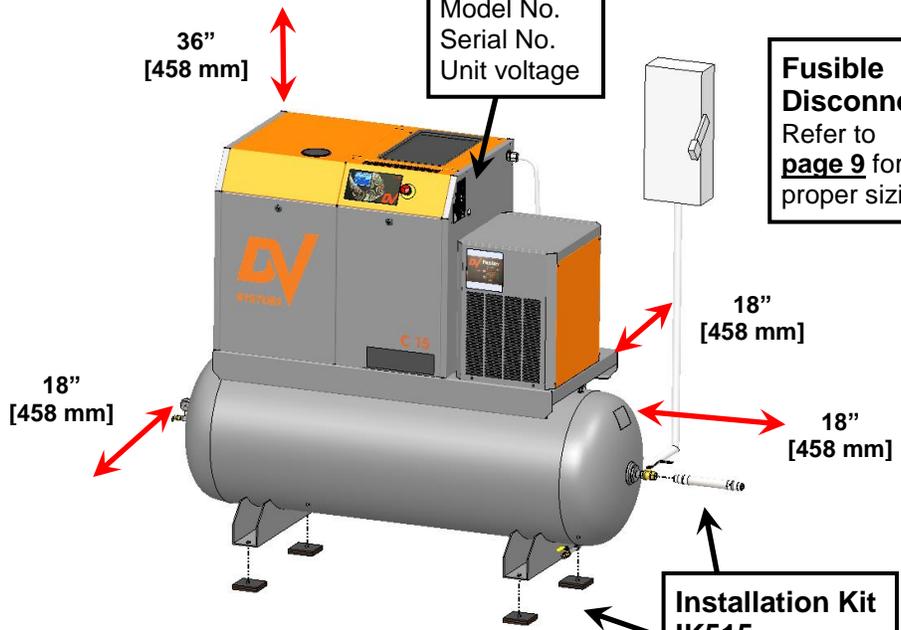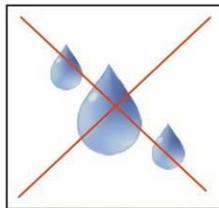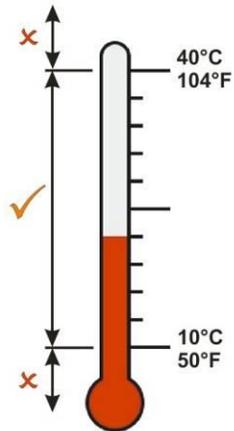


**Note:** Dimensions indicated are typical for all variations of 'C Series' Units, ie base-mounted and tank-mounted.

- The Unit must be located indoors, in a dry, clean, cool, dust free, and well ventilated area.
- Allow a minimum 18" (458 mm) around and 36" (915 mm) above Unit.
- The ambient temperature should be between 10°C and 40°C (50°F and 104°F).
- Ensure that the floor under the Unit is smooth, level and capable of bearing the weight of the Compressor.
- If installed in a compressor room, ensure that the room is adequately ventilated.
- The unit must be anchored to the floor using isolator pads.

### Lubrication.

(Refer to Page 8)

- Before starting the Unit for the first time, ensure there is oil in the Reservoir.
- The Unit is equipped with the Sight Glass.
- The oil level should be close to the center of the Oil Sight Glass, while at rest.
- Check the oil level after the Unit has been at rest for a minimum of 5 minutes.

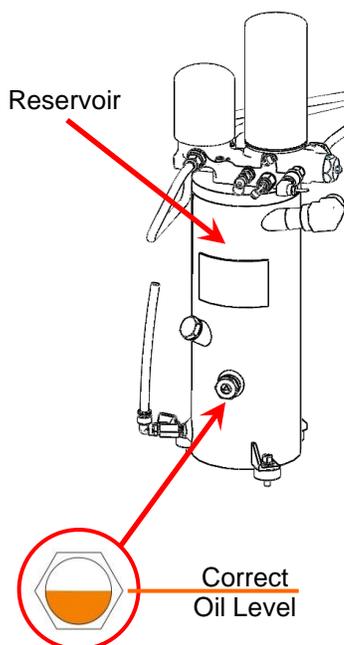

### Rotation.

(Refer to Page 10)

- Units are equipped with Advanced Phase Detection feature which prevents Units from rotating in the reversed direction.
- An 'E:0090 Phase Sequence' Error will appear on the Controller Screen if the phase sequence is incorrect. If this occurs, simply switch the incoming leads 'L1' and 'L3' at the Control Panel.

## Quick Start (cont'd)

### Unit Operation.

Shown below is the 'CSC300' Controller which regulates the operation of the Unit. It is used to start and stop the Unit, and it provides information as to system pressure, temperature, etc.

**Starting the Unit:** Press the '**Start**' Button.

**Stopping the Unit:** Press the '**Stop**' Button

### Caution:

1. Do not stop the Unit using the 'Emergency Stop' Button unless there is a danger to the product or of personnel injury.
2. Do not stop the Unit by use of a disconnect or breaker.



**Using the Emergency Stop Button, disconnect, or breaker to stop the Unit will not allow the Unit to go through an unloading sequence, and could result in damage to the Motor, Starter, or other electrical components. Damage caused in this manner is not covered by the manufacturers Warranty.**



**Emergency Stop.**  
Will quickly shut the Unit off. Is only to be used in an emergency.



**Start.**  
Starts the Unit.

**Stop.**  
Causes the Unit to enter 'Idle' mode and then shut off.

**Digital Readout.**  
Indicates Unit pressure, temperature, etc.

**Enter, Up, Down & Escape.**  
Used in the programming and changing of operating parameters of the Unit.

## Safety Precautions

In order to operate the Compressor Unit safely and correctly, we have opted to use the following symbols to make you aware of important points. These points relate to user safety and preventing equipment problems. Please pay close attention to these sections.

<div style="text-align: center; background-color: black; color: white; padding: 5px; border-radius: 10px; margin-bottom: 10px;">  <b>WARNING</b> </div> <p><b>Important safety Information.</b> A hazard that may cause serious injury or loss of life.</p>	<div style="text-align: center; background-color: black; color: white; padding: 5px; border-radius: 10px; margin-bottom: 10px;">  <b>CAUTION</b> </div> <p><b>Important information that indicates how to prevent damage to equipment, or how to avoid a situation that may cause minor injury.</b></p>	<div style="text-align: center; background-color: black; color: white; padding: 5px; border-radius: 10px; margin-bottom: 10px;">  <b>NOTE</b> </div> <p><b>Information that you should pay special attention to.</b></p>
--	--	---

 **WARNING**

The following hazards may occur during the normal use of the equipment. Please read the following chart.

<u>Area:</u>	<u>Hazard:</u>	<u>Safeguards:</u>
What to look for.	What may occur if precautions are not observed.	How to avoid the hazard.
	Tampering with the Unit while under full or partial pressure may cause an explosion.	Relieve all pressure from the Unit before attempting any repair or maintenance work.
	As the Unit starts and stops automatically, serious injury may result from working on the Compressor with the power still in the 'on' position.	Shut off all power to the Unit before attempting to repair or maintain the Compressor.
	As the Unit starts and stops automatically, do not come into contact with moving parts.	Shut off all power to the Unit before attempting to repair or maintain the Compressor.
	Air compressed by the Unit is not suitable for inhaling. It may contain vapours harmful to your health. Compressor capable of pressures >50psi.	Never breath untreated compressed air produced by the Compressor. Do not direct air stream at body.
	Compressor Air End, Motor, and Tubing become hot when running. Touching these areas may cause serious burns.	Never touch the Air End, Motor, or Tubing during or immediately after operation.
	As the electrical components on the Compressor are General Purpose, there is a potential for explosion, should vapours be present in the area.	Do not install in hazardous locations. The Compressor must be a minimum of 20 feet (6.1 meters) from any source of potentially explosive vapours.

## Unpacking and Inspection

A black triangle with a white exclamation mark inside, indicating a warning or important note.

### **NOTE**

Each DV Systems Air Compressor is carefully tested and inspected before shipment. Though every attempt is made to ensure the safe and complete shipment of our product, freight damage or misplacement of goods may occur.

Shipments of DV Systems products are the property of the Consignee when the products leave our facility. DV Systems Inc. is not responsible for any damages or shortages caused to the product after it has left our shipping dock.

It is the responsibility of the receiver of the goods, either the Distributor or Customer, to ensure that the product has been shipped in full, and has arrived in suitable condition. Damage to the product may not be visible at time of off-loading, but may only become apparent upon unpacking or start-up.

### Some areas to initially check are as follows:

- a) Check for damage to the crating and/or packaging.
- b) Check the exterior of the Cabinet for damage, either cosmetic or mechanical.
- c) If there is mechanical damage, open the Cabinet to determine whether there is any internal damage to the Unit.

### Should there be damage to the product or shortages in shipment:

- 1) Stop any further unpacking or operation of the product.
- 2) Make note of the problem on the Freight Bill, should it concern a shortage or visible damage to the product.
- 3) Should the damage be noticed only after the product has been received, contact the transport company immediately to file a claim.  
Depending on the problem, it may be wise to photograph the damage. Also, it may be wise to discuss with the carrier representative the time allotted to give notice of loss or damage to the product; there may be guidelines which limit timeframes of same.
- 4) Do not attempt further unpacking or operation of the product. Also, do not discard any packing material used.
- 5) A Loss or Damage Claim must be submitted to the carrier and supported by the following documents:
  - Copy of Freight Bill of Lading
  - Copy of the Invoice and Estimate to repair, in case of damage
  - Damage Report
  - Copy of photos, if applicable


## Installation – Mechanical

### Moving of the Unit.

When moving the Air Compressor, the forklift or hand lift forks go under the Unit from the directions as indicated.

When lifting from position 'A', use extended forks.

Please be advised that care must be taken when moving and positioning the Units as they are top heavy.

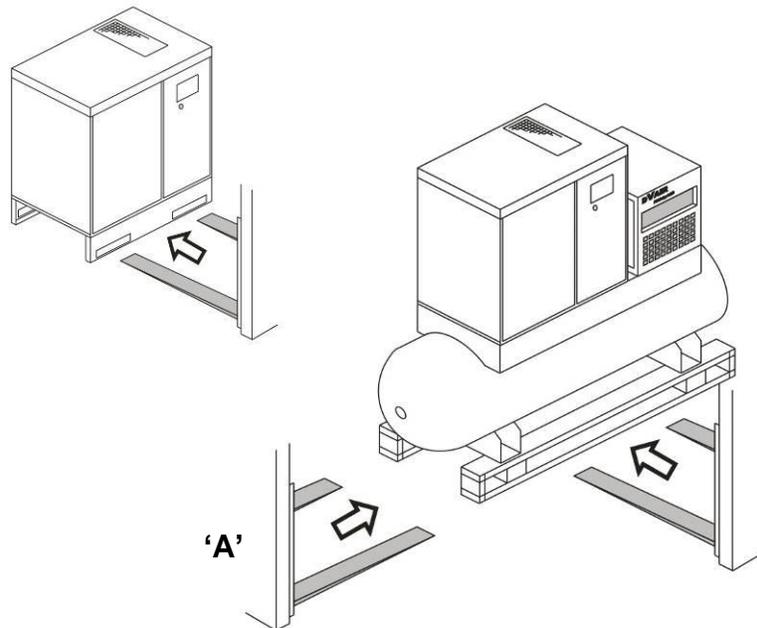


### Location of the Unit.

Items to consider when installing the Unit are as follows:

- The Unit must be located indoors, in a dry, clean, cool, dust free, and well ventilated area. If possible, the Compressor should be located in a separate room or area, away from the general operations of the shop.
- Allow a minimum of 18" (458 mm) around and 3 feet (915 mm) above the Unit for easy access to the various sides, this being for both the proper ventilation of the Unit and ease of servicing.
- Ensure that the floor under the Unit is smooth, level and capable of bearing the weight of the Compressor. The Compressor must sit squarely on the floor.
- Ensure that the Unit is anchored to the floor using isolator pads.
- If installed in a compressor room, ensure that the room is adequately ventilated. (One Horsepower produces approximately 2500 BTU/HR.) See Page 7.
- The ambient temperature should be between 50°F and 104°F (10°C to 40°C).

- If installing the Unit on a mezzanine, ensure that the structure can safely support the weight of the Unit. As well, the sound level of the Unit may increase due to the harmonics created by the structure; use Vibration Pads to lessen this.
- When anchoring the Unit, ensure that there is approx.. 1/4" (0.75cm) between the Nut and the Compressor Foot (as shown below). Do not bolt down tightly.

Many common Compressor problems can be attributed to the location or installation of the Unit. Make sure the Unit is in a suitable location, and installed correctly.

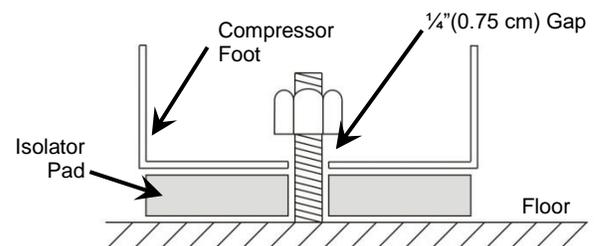


**The Compressor must not be operated in a confined area where the heat from the Unit cannot readily escape.**

## Installation – Mechanical (cont'd)

Shown below are items which assist in making a good installation. These are both intake and exhaust ductwork, helping the Unit to a) draw in clean outside air and b) exhaust the warmer air away from the Unit. The warmer air may be used, with the inclusion of a damper in the exhaust ducting, to warm the interior of the building during the colder months of the year.

### Intake and Exhaust Ducting

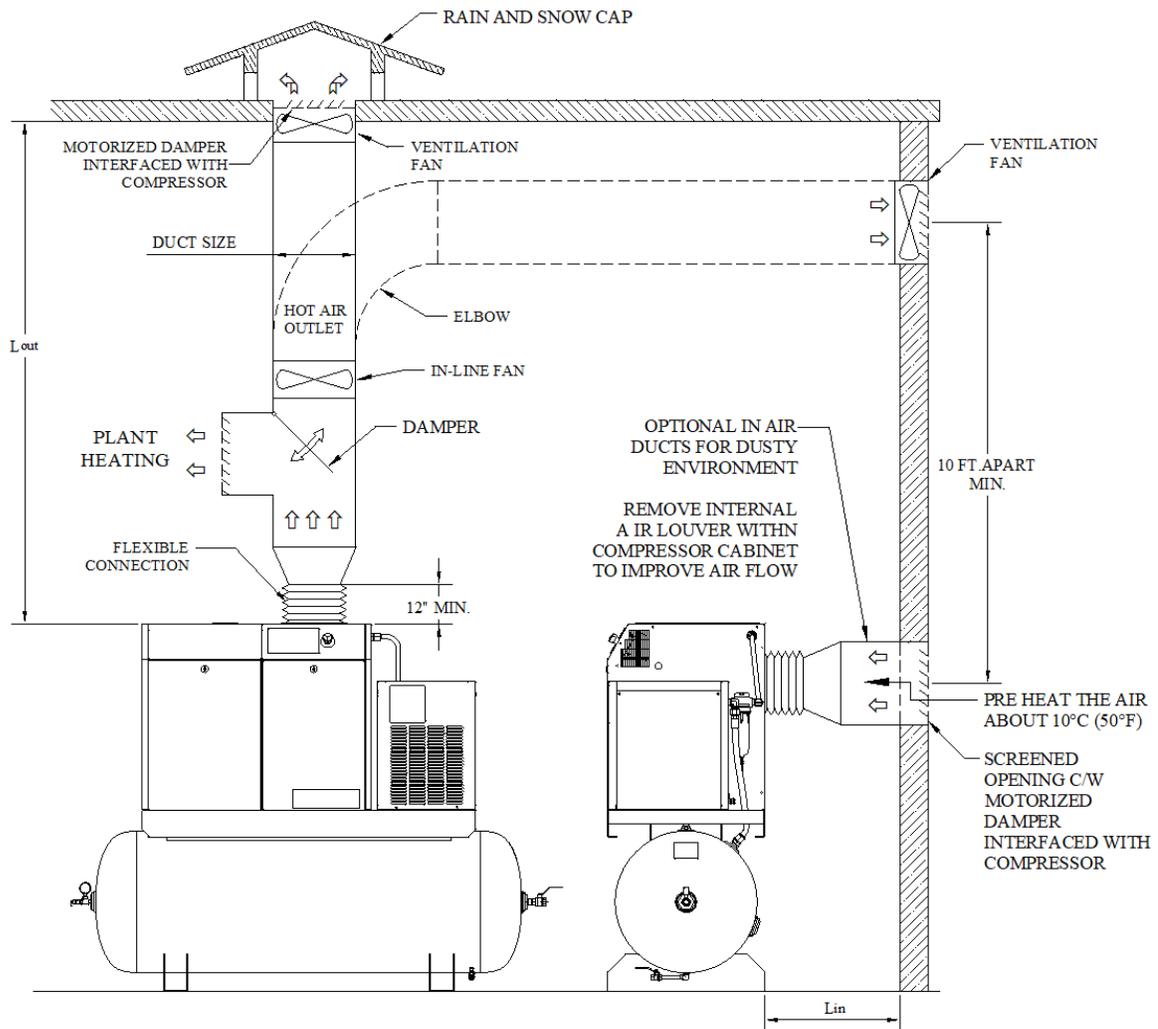

MODEL	HP	HEAT LOAD (BTU/HOUR)	COOLING AIR (CFM)	RECOMMEND MIN. DUCT SIZE	MAX. DUCT LENGTH $L_{in} + L_{out}$	AIR OUT OPENING AT COMPRESSOR
C 10	10	30,240	650	Ø 12" (CIRL.) 12" x 12" (RECT.)	10 FT.6	OUTLET SIZE 10 3/8" x 17 7/16"
C 15	15	42,960	2,030	Ø 14" (CIRL.) 14" x 14" (RECT.)		INLET SIZE 6 3/8" x 12 3/16"

NOTE:

1. DUCTING SIZE BASED ON GALVANIZED STEEL DUCTS.
2. MAXIMUM PRESSURE DROP DUE TO DUCTING SYSTEM SHOULD BE WITHIN 0.1 IN. OF WATER.
3. ADDITIONAL VENTILATION SYSTEM NEEDED FOR PRESSURE DROP EXCEED ABOVE LIMIT.
4. AMBIENT TEMPERATURE: MIN. 10°C (50°F) ~ MAX. 40°C (104°F).
5. ANY DEVIATION FROM ABOVE INSTALLATION, CONSULT DV SYSTEMS FOR TECHNICAL SUPPORT.
6. LONGER THAN 10 FT. OF DUCT LENGTH REQUIRES IN-LINE FAN(S)

## Lubrication

### Initial Start-up.

Each Compressor Unit built is extensively tested at the factory before shipment. The Unit is shipped with the original oil in it as used for testing purposes.

Check the Oil level and for any Oil leaks on a daily basis. This must be done when the Unit is off. Top up the Oil level on a monthly basis.

Use only DV Systems 'DEV-3000' Synthetic Oil.

### Subsequent Oil Changes.

Drain the existing oil from the Unit. (Please be advised that the Unit cannot be drained fully of oil, as some oil may remain in various components ie Cooler, Tubing, etc.)

Fill the Oil Reservoir to the center of the Sight Glass, as shown below. Do not under or overfill.

Use only DV Systems 'DEV-3000' Synthetic Oil, available in both 1 US gallon (3.8 litre) jugs or 5 US gallon (5 x 3.8 litre) pails. Any remaining oil may be used for 'top-ups'.

The 'MK-C7-15-1' Maintenance Kit includes:

- (2) US Gallon (3.8 litre) Oil ('DEV-3000-K1')
- (2) Oil Filter ('DSC-603')
- (1) Air/Oil Separator Filter ('DSC-302')
- (2) Air Filters ('DSC-001931')
- (1) In Line Filter ('DSC-612')
- (1) Scavenge Line Tube ('DSC-382')




**Do not attempt to operate the Unit without first checking whether there is oil in the Oil Reservoir. Add oil as required. Serious damage may result from use, however limited, without oil.**



**Use of improper oil may negatively affect Compressor performance or shorten Unit life. Resulting problems are not covered by the DV Systems Inc. Air Compressor Warranty.**



**Condensation (water) may form in the Oil Reservoir with the oil. If this occurs, as the water will tend to settle on the bottom of the Reservoir, drain the water from the Reservoir until you notice oil draining. Top up the Reservoir with new oil using only the DV Systems 'DEV-3000' oil.**

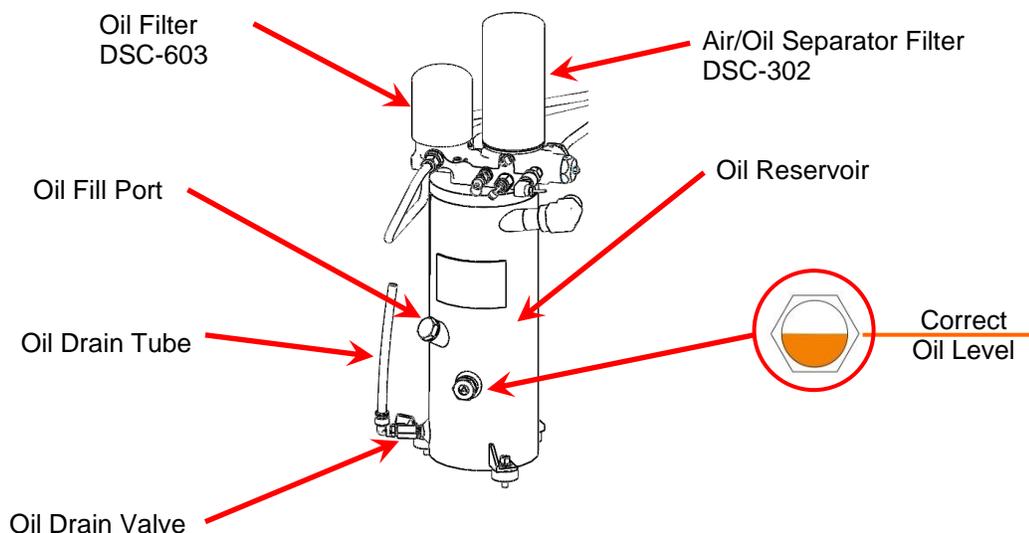

## Installation - Electrical

### General Information.

It is your responsibility to ensure that the Compressor Unit is electrically connected in a safe and correct manner. **Any electrical work should be carried out by a competent Electrician, and be done in such a way that it meets all applicable Codes and Regulations.**

Ensure that a suitable Fused Disconnect or Breaker (by others than DV Systems) is installed in the electrical supply before the Compressor Unit.

Ensure that a suitable Fused Disconnect or Breaker is sized and installed according to the appropriate local electrical codes.

Electrical wiring and conduit from the building supply, through the Compressor Cabinet, and to the Switch in the Compressor Control Panel, must be rated for 90°C (194 °F) or higher.



- Failure to correctly connect the Compressor to your building's electrical services may result in serious personal injury or damage to the equipment.
- Install all covers and panels before applying power to the Unit.
- Failure to install proper fuse protection may void the unit warranty.
- Before servicing the Unit, ensure the power source has been shut down and locked off.
- Read and understand the information contained in this manual before installing or operating the Unit.
- This product must be connected to a grounded, metallic, permanent wiring system, or an equipment-grounding terminal or lead on the product.

**Failure to observe any of the above precautions could result in severe personal injury or death, and/or damage to the Unit.**

### Fusible Disconnects.

- Ensure that all wiring, fusing, etc is done in a manner that meets with the appropriate codes and regulations.
- See the sales drawings and electrical schematic contained in this manual for information about Motor nameplate amps, this is used to determine the appropriate Disconnect / Breaker and Wiring sizes.
- Units equipped with **Variable Speed Drives** (VSDs) **MUST** use **FAST-ACTING FUSES**. Refer to the table below for fuse sizes.

#### Fixed Speed Units:

**Use TIME-DELAY type fuse.**

**Max. Allowable Fuse =  
1.75 x Motor Full Load Amp**

#### VSD Units:

Voltage	Fuse Type	Fuse Amp	DV Fuse Part No.	DV Disconnect Kit (Disconnect + Fuses)
200	HSJ, DFJ	<b>60</b>	F060	FD-060
230		<b>50</b>	F050	FD-050
460		<b>25</b>	F025	FD-025
575		<b>20</b>	F020	FD-020


## Installation – Electrical (cont'd)

### Electrical Connection.

The Electrician is to bring power to the Unit through the 3/4" conduit hole located on the Right Panel. The Electrical Panel is accessible by means of opening the Unit Front RH Panel as shown at right.

3 terminal blocks are provided for main power hook-up

Connect ground wire to Protective Earth terminal. Bring power to L1,L2,L3. See page 12 for start-up procedures

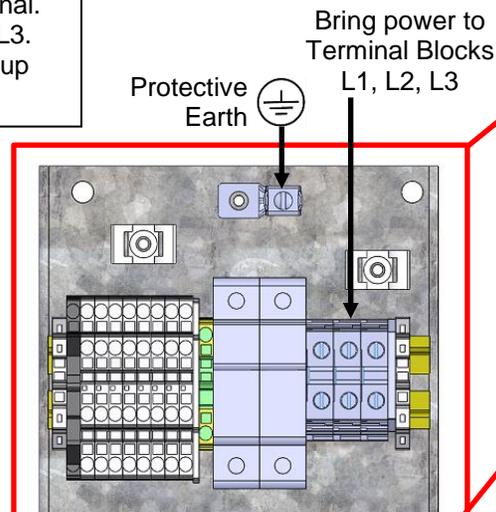

### Motors.

Wiring must be done in a manner that the full Motor nameplate voltage +/- 5% is available at the Motor terminals during start-up. Contact your local Distributor or Service Centre if additional information is needed.

The Warranty that exists on the Electric Motor is that of the original manufacturer. In the event of a Motor failure, contact your DV Systems Distributor or Service Centre for the location of the nearest authorized Motor Service Centre.


### Motor/Air End Rotation.

It is critical that the Motor and Air End in the Rotary Screw Unit be turning in the correct manner. Irreparable damage will be done if the Unit rotates in the opposite direction.

This unit is equipped with Advanced Phase Detection which prevents unit from rotating in the reverse direction. If the following error is visible on the Screen and the Unit will not start, simply switch power leads L1 and L3. Press the 'Reset' key on the Controller to reset the error message.

E:0090 Phase Sequence

Note: If the Motor is replaced or Motor Leads are re-wired, visually check for correct Motor Rotation before installing the belts.

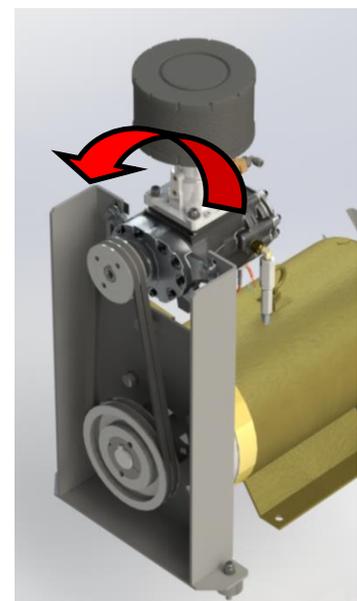



## AC Motor Maintenance Instructions



### Cleaning.

To ensure that the Motor operates at optimum temperatures and provides years of trouble-free service, periodically clean the outside of the Motor Housing of any build-up of dust, etc. Though it is not anticipated that, if installed correctly and in a suitable environment, there should not be much build-up on the Motor, keeping the Housing clean will allow the Motor to operate more efficiently.

### Lubrication.

This is a ball bearing motor. The bearings have been lubricated at the factory. Motors that do not have regrease capability are factory lubricated for the normal life of the bearings.

Noted below is a chart outlining the interval at which the Motor should be lubricated, this based on the Motor horsepower. This must be part of a regular maintenance schedule.

Motor HP	Interval in Hours	Weight of Grease		Volume of Grease	
		Ounces	Grams	Cubic Inch	Teaspoon
10	9,500	0.61	17.4	1.2	3.9
15	3,600	0.61	17.4	1.2	3.9

The above chart is based on a standard environment in which the Motor is operating of 40°C. For other conditions, please multiply the Hour Interval from the chart above by the factor as indicated below.

Severity of Duty	Factor	Environmental Conditions
Standard	1.0	40°C (104°F), clean, little corrosion
Severe	0.5	50°C (122°F), moderate dirt, corrosion

### Lubricant.

Motors are pre-greased, normally with Chevron SR #1-2. Equivalent and compatible greases are Texaco Polystar, Shell Dolium R and Amoco Rykon Premium #2.

## Start-up Procedures

### Unit Controls

#### **Start Button**

Allows the Unit to start.

#### **Stop Button**

Use this to shut the Unit off. Allows the Unit to idle and then stop after several seconds.



#### **Emergency Stop Button**

Do not use to normally stop the Unit. To be used to stop the Unit in emergencies only. Normal use will damage electrical controls and Shaft Seal.

### Initial Start-up

- 1) Remove the LH Front Access Panel, and ensure that there is sufficient Oil in the Oil Reservoir. Refer to the 'Lubrication' section (page 8) in this manual for proper type and level of Oil.
- 2) Do a visual inspection of the Unit, and ensure that all fasteners are sufficiently tightened. This must be done, as some fasteners may become loose in transit.
- 3) Place the Fused Disconnect / Breaker in the 'On' position. Check that there is power to the Controller
- 4) During normal operation of the Unit, keep the Access Panels closed at all times.
- 5) Ensure the Ball Valve on the Unit is closed, press the 'Start' Button, and run the Unit up to maximum pressure. The Unit will run up to approx. 145 psi (10bar), at which point the Motor will continue to run but not compress air.
- 6) Once the Unit reaches 145 psi (10bar), it will idle for 5 minutes and shut off. For VSD units, the unit will idle for 2 minutes and shut off.
- 7) Open the Ball Valve slightly and allow the air to bleed from the Tank. Once the pressure reaches approx 125 psi (8.6bar), the Unit will start and begin to compress air after a short delay. For VSD units, this pressure is 135 psi (9.3bar).
- 8) Measure the amp draw as the Unit reaches maximum pressure.
- 9) Close the Ball Valve, allow the Unit to reach maximum pressure, idle, and shut off. Once off, check the various fittings etc inside the Cabinet to ensure there are no internal leaks.
- 10) Once you are confident that there are no internal leaks, the Unit will be ready for normal use.
- 11) Register the Unit to Activate the Warranty by completing the Warranty Registration form at:

[gdg.gardnerdenver.com/DV-Rotary-Warranty](http://gdg.gardnerdenver.com/DV-Rotary-Warranty)



Do not place any materials in close proximity to the Compressor. Placing materials against or close to the Unit will limit the cooling required, and could lead to premature failure.



Shut off all power to the Compressor Unit before attempting any repair or maintenance.



Adjusting the settings of the Controller could adversely affect the performance of the Unit. Only those individuals with knowledge of the Unit should make any adjustments.

## Preventative Maintenance Schedule



**When servicing the Air Compressor, shut off all power to the Unit, and drain it of air pressure.**



**It is the responsibility of the Compressor owner to ensure that a regular Maintenance Schedule is followed.**

Noted on the following pages are general Maintenance guidelines based on average working conditions. Should the Unit be worked under extreme conditions, please contact your DV Systems Distributor for further input. As well, all maintenance/service work must be carried out by a qualified Technician.

The typical operating temperature of the Unit, this dependent on ambient temperatures, is between 70°C and 85°C (158°F and 185°F).

If the operating temperature of the Unit is too low (less than 70°C (158°F)):

- condensation will build up in the system and mix with the oil, causing internal component problems in the Unit
- Change the ambient conditions to increase the operating temperature.

If the operating temperature of the Unit is too high (above 85°C (185°F)):

- the oil will oxidize and lose its properties, this causing internal damage to components as well
- to combat this, the oil must be changed more often than noted below.

**Note: For Compressor Units used in an environment where the ambient temperature is above 32°C (90°F), the components marked with a '# ' (on the chart on the following page) must be changed more frequently.**

### Regular Maintenance Items.

DV Systems offers a Maintenance Kit for your Unit, namely:

**MK-C7-15-1** 10 to 15 HP 'C-Series' Units

Each Kit consists of the following items:


- |     |                    |                          |
|-----|--------------------|--------------------------|
| (2) | <b>DEV-3000-K1</b> | 1 Gal. of Synthetic Oil  |
| (2) | <b>DSC-603</b>     | Oil Filter               |
| (1) | <b>DSC-302</b>     | Air/Oil Separator Filter |
| (2) | <b>DSC-001931</b>  | Air Filter               |
| (1) | <b>DSC-612</b>     | Inline Filter            |
| (1) | <b>DSC-382</b>     | Scavenge Line Tube       |

### Internal Access for Maintenance.

The internal components of the Unit are accessible for servicing by way of removing the LH Front Panel.

The Belt access is by way of the LH Side Panel

Remove the plastic cap to change air/oil separator filter

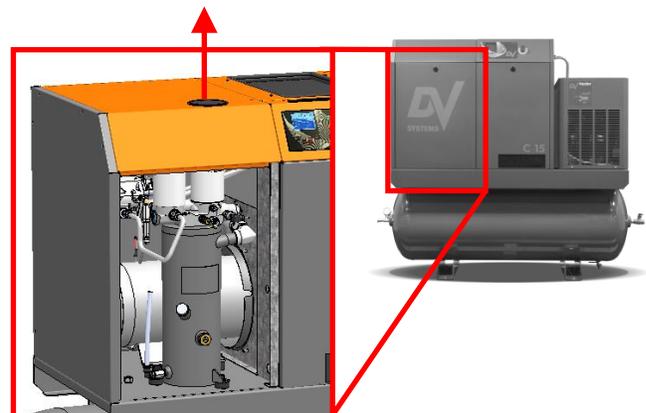



## Preventative Maintenance Schedule (cont'd)

Maintenance Item:	Daily	Maintenance Interval (in 000's of Hours)																		
		2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38
<b>Compressor Room</b>																				
Temperature	Inspect	Ambient Temperature should be between 10°C and 40°C (50°F and 104°F)																		
Cleanliness	Inspect	[Yellow grid for inspection]																		
<b>Air Compressor Unit</b>																				
Check Oil Level	Inspect	[Yellow grid for inspection]																		
Replace Oil # (See Note b)	(1)				X					X					X				X	
Replace Oil Filter #	(2)		X		X		X		X		X		X		X		X		X	
Replace Air / Oil Separator #	(3)				X					X					X				X	
Replace Air Intake Filter #	(4)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check Belt Tension		X	X	X		X	X	X		X	X	X		X	X	X		X	X	X
Replace Belts					X					X					X					X
Replace Tank Relief Valve							X							X					X	
Replace Solenoid (5)	(5)				X					X					X				X	
Rebuild Intake Valve (6)	(6)				X					X					X				X	
Rebuild Thermo Valve (7)	(7)						X							X					X	
Rebuild Minimum Pressure Valve (8)	(8)				X					X					X				X	
Replace Scavenge Line Filter (9)	(9)				X					X					X				X	
Motor Bearing Lubrication		Refer to Motor Manufacturer's Recommendations on Page 11																		

- Notes:**
- a) For Compressor Units used in an environment where the ambient temperature is above 32°C (90°F), or b) where the Unit temperature runs regularly above 80°C (175°F), the components marked with a '#' must be changed twice as often (example: in 4000 hours instead of 8000), and not as noted above.
  - b) The DV Systems Oil used in the Rotary Screw Units is rated as an 8000 hour Oil. A complete Oil change must be done every 8000 hours of Unit operation, or every 12 months, whichever occurs first. Please refer to the Warranty on Page 25 for further information.
  - c) If a component, during a regular inspection, has proven to be defective or unfit for regular operation, it must be repaired or replaced.

Parts and Repair Kits based on the above chart are as follows:

- |     |                                   |                                      |
|-----|-----------------------------------|--------------------------------------|
| (1) | Oil:                              | DEV-3000-K1                          |
| (2) | Oil Filter                        | DSC-603                              |
| (3) | Air / Oil Separator:              | DSC-302                              |
| (4) | Air Intake Filter                 | DSC-001931                           |
| (5) | Solenoid                          | DSC-001951                           |
| (6) | Intake Valve Repair Kit           | DSC-001950                           |
| (7) | Thermo Valve Repair Kit:          | DSC-111-1                            |
|     | Thermo Valve Brass Socket         | DSC-003059 (Not included in the kit) |
| (8) | Minimum Pressure Valve Kit:       | DSC-410                              |
| (9) | Scavenge Line In-Line Filter      | DSC-612                              |
|     | Air End Shaft Seal Kit            | DSC-002718                           |
|     | Control Panel Ambient Air Filter  | DSC-001447                           |
|     | VSD Control Panel Separation Foam | DSC-002719 (VSD units only)          |

As noted previously, the 'MK-C7-15-1' Maintenance Kit includes the following items:

- |     |                    |                          |
|-----|--------------------|--------------------------|
| (2) | <b>DEV-3000-K1</b> | 1 Gal. of Synthetic Oil  |
| (2) | <b>DSC-603</b>     | Oil Filter               |
| (1) | <b>DSC-302</b>     | Air/Oil Separator Filter |
| (2) | <b>DSC-001931</b>  | Air Filter               |
| (1) | <b>DSC-612</b>     | In-Line Filter           |
| (1) | <b>DSC-382</b>     | Scavenge Line Tube       |



## Common Compressor Faults

### Common Faults.

Noted below are the most common Faults experienced.

### 'CSC300' Alarms.

**There is an issue with the Unit, but it will still operate.**

<u>Code:</u>	<u>Description:</u>	<u>Most Common Items to Check:</u>
A:0083	Motor phase imbalance	Check supply voltage, fuses and cable
A:0119	Delivery Pressure High	Solenoid not working, Intake Valve Orifice clogged, Transducer dirty or faulty, pressure changed incorrectly, alternate external pressure source
A:0129	Delivery Temperature High	Ambient temp high, Unit dirty, low oil level, no air flow through Unit, Temp Sensor defective
A:2816	Power Failure Occurred	Press 'Reset' Button and restart Unit
A:4819	Routine Service Due	Service Unit and reset Service Timer (Page 'P16' on Controller)
A:4809	Grease Service Due	Service motor and reset Grease Service Timer (Page 'P16' on Controller)

### 'CSC300' Shutdown Errors.

**There is an issue with the Unit, and the Unit will not operate until the Fault has been addressed.**


<u>Code:</u>	<u>Description:</u>	<u>Most Common Items to Check:</u>
E:0010	Emergency	Emergency stop switch is pressed
E:0082	Motor Overload	Motor drawing high amps, low voltage, high pressure settings, low oil level
E:0083	Motor phase Imbalance	Check motor connections in the control panel and motor connection box
E:0090	Phase Sequence	Rotation of Motor wrong, sequence order of supply cable incorrect
E:0091-0093	Phase L1/L2/L3 Fault	Check supply voltage, fuses and cable
E:0115	Delivery Pressure Sensor Fault	Transducer not making good electrical contact, or defective
E:0119	Delivery Pressure High	Solenoid Not working, Intake Valve Orifice clogged, Transducer dirty or faulty, pressure changed incorrectly, alternate external pressure source
E:0125	Delivery Temp Sensor Fault	Temperature Sensor not making good electrical contact, or defective
E:0129	Delivery Temperature High	Ambient temp high, Unit dirty, low oil level, no air flow through Unit, Temp Sensor defective
E:0902	Anti-Rotation	Rotation of Main Motor wrong, Solenoid Valve not relieving pressure

## Variable Speed Drive

Your DV Systems 'C Series' Rotary Screw Compressor Unit may have been equipped with a Vacon 'Variable Speed Drive', or 'VSD'. A Compressor with an integral VSD can handle the constant loads for an extended period of time (running at close to 100% duty cycle), but it can also run at slower speeds to accommodate lower air demands at other times of the day.

Variable Speed Drives can reduce the overall energy costs associated with operating the Compressor Unit by simply controlling the speed of the Motor and Air End to match consumption. As Rotary Screw Compressors using the variable speed technology match the varying air demands and therefore have the ability to impact your energy consumption, some energy providers have offered rebates when these Units are purchased. Consult your local energy provider to determine if this applies.

Shown below is a 'C Series' Unit with a Variable Speed Drive.

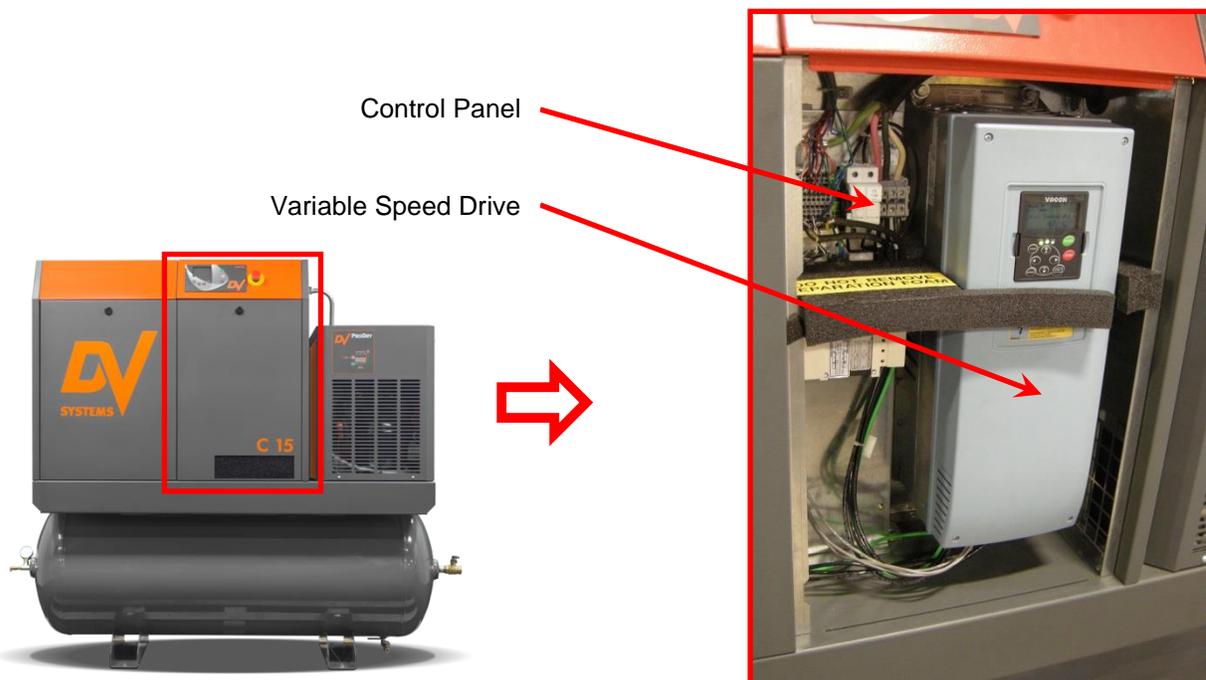

### VSD Interface


The VSD Controller Interface is shown at right. It provides a means of operating, monitoring, and adjusting the parameters of the Variable Speed Drive.

Please note that adjustments to the parameters of the Variable Speed Drive should be made only by qualified Technicians, or with the guidance of factory trained personnel. Incorrect adjustments will affect the performance of the Unit, and could result in damage to the Drive.



## Variable Speed Drive (cont'd)

### Operating Screen

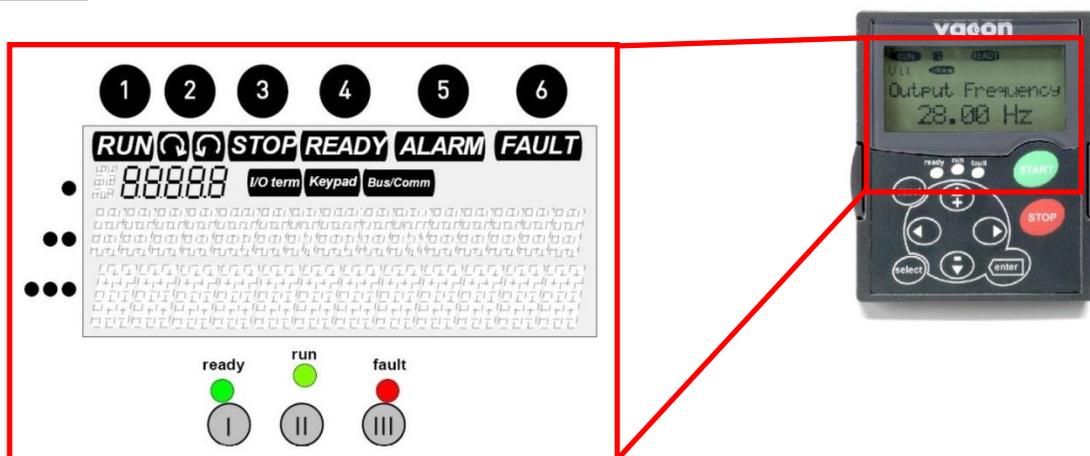

### Typical Drive Status Indicators on Screen

- 1 RUN = Motor is running; Blinks when the stop command has been given but the frequency is still ramping down.
- 2  = Indicates the direction of motor rotation.
- 3 STOP = Indicates that the drive is not running.
- 4 READY = Lights when AC power is on. In case of a trip, the symbol will not light up.
- 5 ALARM = Indicates that the drive is running outside a certain limit and a warning is given.
- 6 FAULT = Indicates that unsafe operating conditions were encountered due to which the drive was stopped.

-   = Illuminates with the AC power connected to the drive and no faults are active. Simultaneously, the drive status indicator READY is lit up.
-   = Illuminates when the drive is running. Blinks when the STOP button has been pushed and the drive is ramping down.
-   = Blinks when unsafe operating conditions were encountered due to which the drive was stopped (Fault Trip). Simultaneously, the drive status indicator FAULT blinks on the display and the fault description can be seen, see chapter 7.3.4, Active Faults.

- = Location indication; displays the symbol and number of menu, parameter etc.  
Example: M2 = Menu 2 (Parameters); P2.1.3 = Acceleration time
- = Description line; Displays the description of menu, value or fault.
- = Value line; Displays the numerical and textual values of references, parameters etc. and the number of submenus available in each menu.

## Variable Speed Drive (cont'd)

### Common VSD Fault Codes


Noted below are the most common fault codes that may appear on the VSD. For a more thorough list, please check the manual which deals exclusively with the Vacon Variable Speed Drive and which accompanied the Unit.

Fault Code	Fault	Possible Causes:	Corrective Measures:
1	Over-current.	Current too high in Motor Cable.	Check loading. Check Motor. Check Cables.
2	Over-voltage.	The DC link voltage has exceeded the limits. - too short a deceleration time - high voltage spikes in supply	Make deceleration time longer. Check input voltage.
3	Ground Fault.	Insulation failure in Motor or wiring.	Check Motor wires and Motor.
8	System Fault.	- component failure - faulty operation	Reset the fault and restart the Unit.
13	Frequency Converter under temperature.	Heatsink temperature is below -10°C.	
14	Frequency Converter over temperature.	Heatsink temperature is over 90°C. Overtemperature warning is issued when the heatsink temperature exceeds 85°C.	Check the amount and flow of cooling air. Check the heatsink for dust. Check the ambient temperature. Ensure the switching frequency is not too high in relation to ambient temperature and motor load
15	Motor stalled.	Motor stall protection has tripped.	Check Motor and load.
16	Motor over-temperature.	Motor is overloaded.	Decrease motor load.
17	Motor under-load.	Motor under-load temperature has tripped.	Check load.
22	EEPRON checksum fault.	Parameter save fault. - faulty operation. - component failure.	Should the fault re-occur, contact the Distributor.
25	Microprocessor watchdog fault.	- faulty operation. - component failure.	Reset the fault and restart the Unit. Contact Distributor.
31	IGBT temperature (hardware).	IGBT Inverter Bridge overtemp protection has detected too high a short term overload current.	Check loading. Check motor size. Make identification run.
32	Fan cooling.	Cooling Fan of frequency converter does not start when ON command is given.	Contact Distributor.
50	Analogue Input lin < 4mA.	Current at the analogue input is less than 4 mA. - control cable is broken or loose. - signal source has failed.	Check the current loop circuitry.
52	Keypad communication fault.	The data connection between the control keypad and the frequency converter is broken.	Check keypad connection and possible keypad cable.
54	Slot fault.	Defective option board or slot.	Check board and slot. Contact the nearest Vacon Distributor.
56	PT100 board temperature fault.	Temperature limit values set for the PT100 board parameters have been exceeded.	Find the cause of temperature rise.



## Separator Filter and Refrigerated Air Dryer


Your Unit may be equipped with a Separator Filter and an 'ASD Series' Refrigerated Air Dryer Unit as indicated below. These items are located in the compressed air lines after the air is compressed but before it enters the Air Receiver. This allows for what is termed a 'dry' Tank.

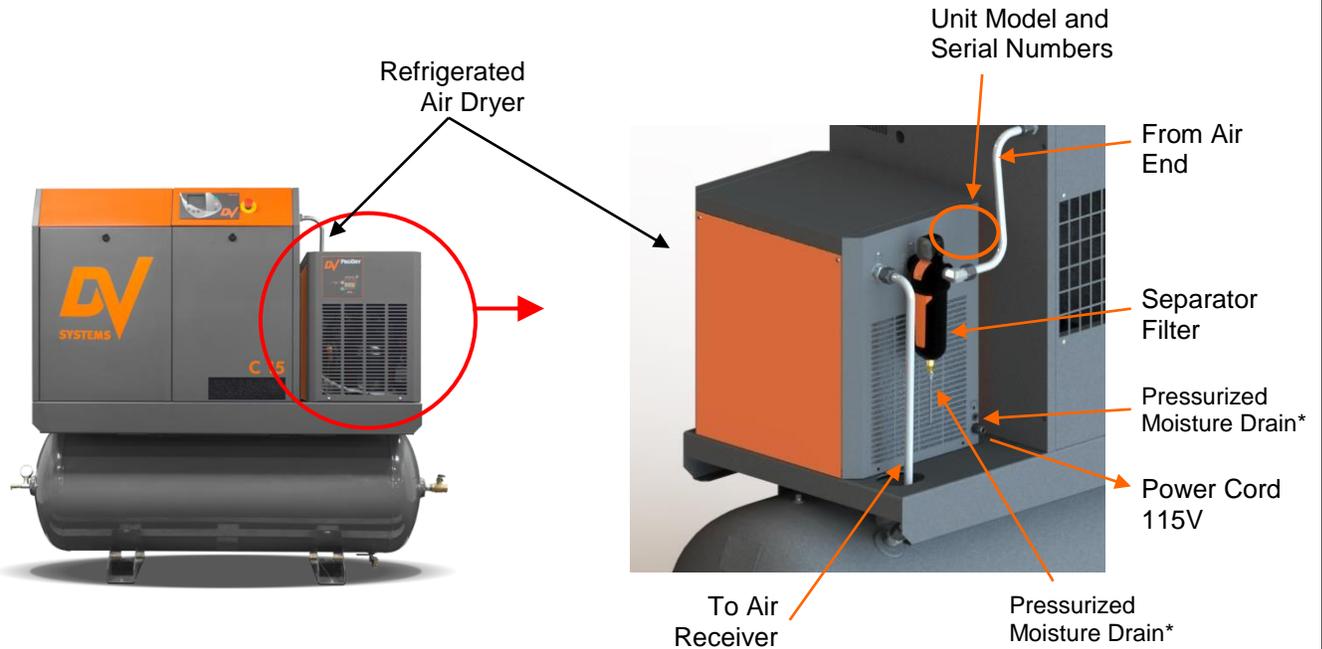

\*Drains will discharge automatically under pressure. It is recommended that pneumatic drain tubes be anchored and filtered as per your local municipality regulations.

More detailed information concerning the Dryer Unit is included in the Dryer manual. The information contained in this manual is a 'quick reference' only.

### Dryer Controls.

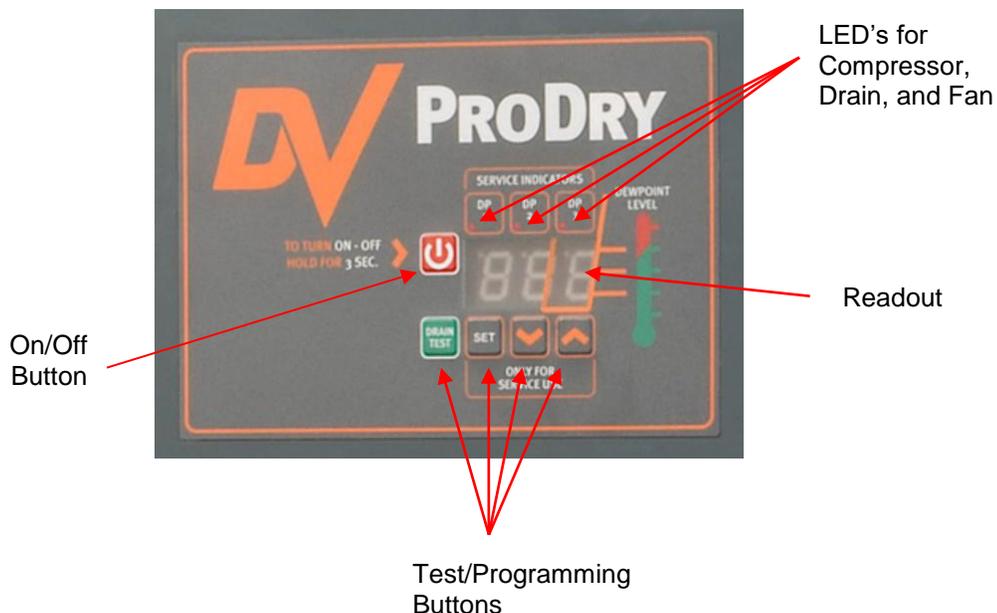


## Separator Filter and Refrigerated Air Dryer (cont'd)

### Typical Dryer Operation.

The Dryer will operate as follows:

- Pressing the 'On/Off' Button for 3 seconds will start the Unit
- There is a time delay of up to 2 minutes before the Refrigerant Compressor starts.
- The Condenser Fan will start approx. 30 seconds there-after.
- The Fan will not normally run at full speed, this indicated by a flashing LED
- The readout will initially show ambient temperature indicated by 3 horizontal bars on the readout
- Once the Fan and Compressor start, the dew point of the Unit will decrease to approx. 1°C, this indicated by 1 or no horizontal bars.
- Once at approx. 1°C, the Fan will stop, only to be called to run again once the temperature increases to approx. 5°C
- Pressing the 'On/Off' Button (when the Unit is operating) will run the Fan at full speed for several seconds, after which the Unit will stop. (The LED will be on continually while the Fan runs at full speed.)

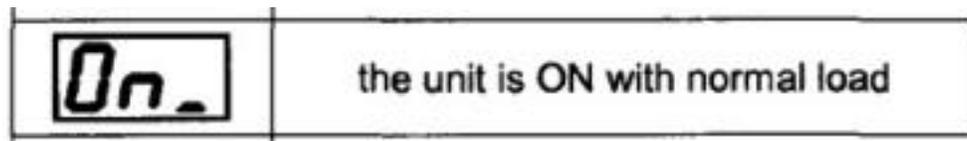

- As well as showing the dew point, the readout may indicate several fault codes as suggested below.

### Typical Fault Codes.

The readout will indicate a variety of 'fault codes', the most common being as follows:

ESA

#### **Energy Saving Mode.**

- The Dew Point has been running at below -1°C for over 6 minutes.
- The Unit will automatically restart operation at 6°C.

PFI

#### **Temperature Probe Alarm.**

- The Temperature Probe is not working properly. It may not be connected to the Board, or the Probe may be defective.
- Replace the Probe if necessary.

HEA


#### **High Temperature Alarm.**

- The Dew Point has been running at above 12.5°C for over 6 minutes. The Unit must be manually turned off and on.
- The fault could be caused by a dirty radiator, high ambient temperature, a faulty Fan, or a faulty refrigerant Compressor, to name only a few.

## Separator Filter and Refrigerated Air Dryer (cont'd)

### Typical Separator Filter.

As previously noted, the Separator Filter is located between the Air End and the Refrigerated Dryer. It contains a 1 micron Separator Element which protects the Dryer Unit by removing liquids and solid particles 1 microns and larger.

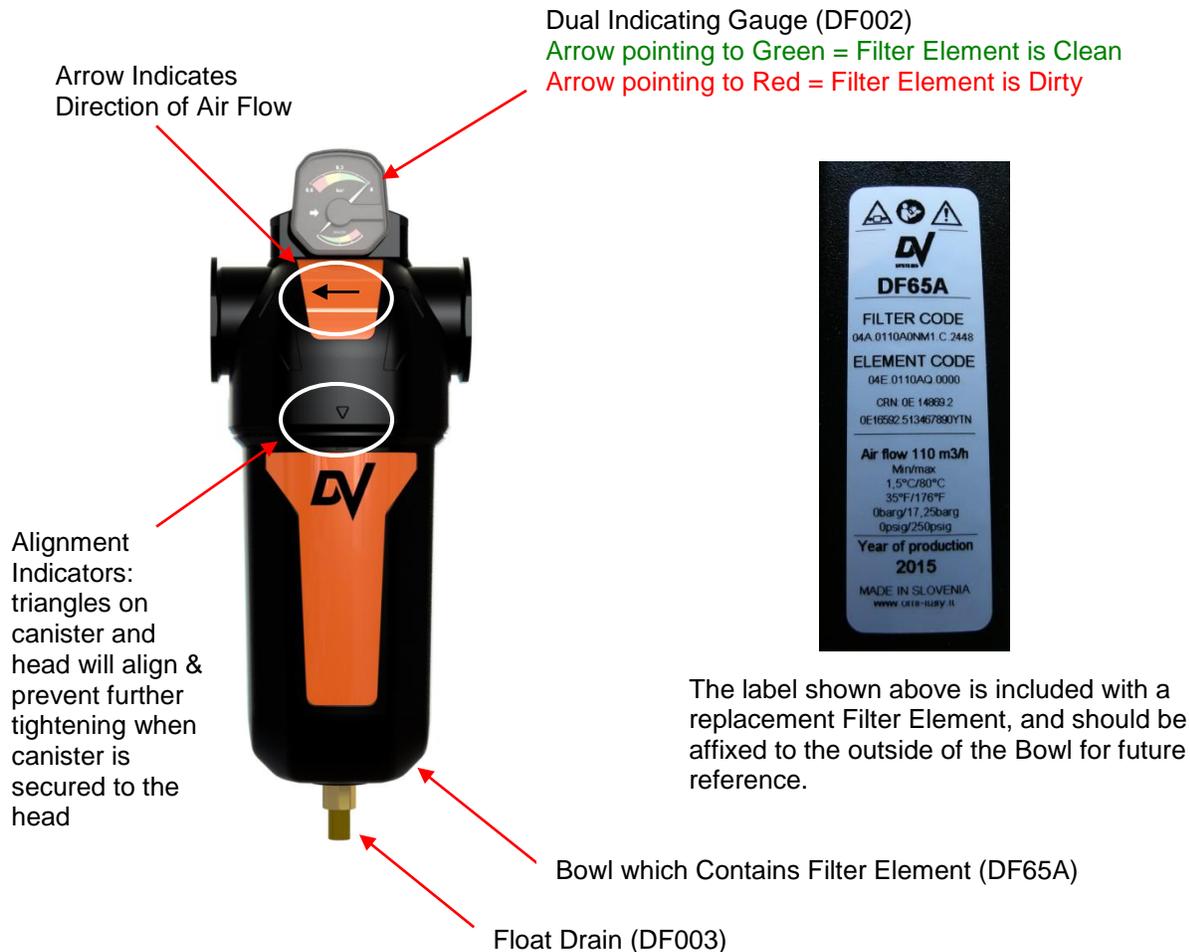

### Filter Element Replacement.

To replace a dirty Filter Element:

- Shut the Compressor Unit off.
- Bleed any compressed air from the system to ensure there is no pressure at the Filter.
- Unscrew the Bowl from the assembly, exposing the dirty Filter Element.
- Pull the Filter Element out of the Canister Head
- Clean any debris from the inside of the Bowl
- Remove the O-ring from the inside of the Canister Head
- Install the new O-ring making sure it is properly seated
- Place the new 1 micron Separator Filter Element into the Bowl (the filter is self-centring).
- Screw the Canister with the Element inside it to the Canister Head until the indicators line up.
- Gauge will return to **green** when Filter is once again under pressure.

## Trouble Shooting Guide



**When servicing the Air Compressor, shut off all power to the Unit, and drain it of air pressure.**

The 'Conditions', 'Causes', and 'Suggested Corrections' as indicated below and on the following page(s) are only a guideline for failures that we have found to be most common.

Though this information is provided in this booklet, it is assumed and expected that any personnel involved in the servicing of an Air Compressor Unit is knowledgeable with this type of equipment. Do not attempt to service a Compressor Unit unless you are familiar with it, as there are many issues that may come into play, the most important being personal safety and the welfare of the Unit.

Should you have any questions, or require servicing to your Unit, please contact your local DV Systems Distributor/Service Center.

<b><u>Condition:</u></b>	<b><u>Cause:</u></b>	<b><u>Suggested Correction:</u></b>
A. Unit won't start.	No power to the Unit.  Loose and/or missing wires in the electrical circuit.  Emergency Stop Button pressed in.  Motor Overload is tripped.  Compressor over-heated and stopped.  Compressor stopped by over-pressure.  Unit has 'timed out' / shut off because pressure has not gone below cut-in pressure of 120 psi.  Power interruption.	Check that power at the disconnect or breaker is on. Also, check any primary and secondary fuses.  Check that all wiring connections are tight. With a wiring schematic, check that all wiring is present and correct.  Release by twisting and pulling out.  Reset the overload.  Insufficient air flow to cool Unit. Ambient temperature too high. Heat Exchanger is dirty. Faulty Temperature Switch. Oil level is low.  Solenoid Valve faulty. Seals on Intake Valve leaking. Intake Valve Spring broken. Pressure Transducer stopped Unit. Lower maximum pressure setting.  Drop pressure below 120 psi.  Reset the Unit.



## Trouble Shooting Guide (cont'd)

<u>Condition:</u>	<u>Cause:</u>	<u>Suggested Correction:</u>
B. No or Insufficient Air Flow.	Air Filter is dirty. Oil Separator is blocked. Intake Valve is faulty. Air leaks in the system. Pressure limits are incorrectly set. Blowdown Solenoid Valve is open. Belt are broken or slipping	Replace the Air Filter. Replace the Oil Separator. Repair or replace the Intake Valve. Check the Unit and system for air leaks. Adjust the pressure settings. Check the wiring to the Solenoid and replace as necessary. Check Belt tension and that Belts are in good condition.
C. Unit is overheating.	Ambient temperature is too high. Blocked air circulation at the Unit. Heat Exchanger is dirty. Oil level is too low. Using wrong type of compressor oil. Thermo Valve is faulty. Oil Filter is blocked. Temperature Sensor is faulty. Thermostat is faulty. Pressure is too high. Cabinet door/panel is open/off.	Check cooling air circulation. Check the air circulation in and around the Unit. Clean the Heat Exchanger Add oil as required. Change to the factory recommended oil. Check and repair as necessary. Replace the Oil Filter. Check the wiring to the Temperature sensor. Replace the Sensor if necessary. Replace the Thermostat. Lower the pressure setting. Secure the door/panel to the Unit.
D. Compressor Starts Slowly.	Intake Valve not functioning properly. Ambient temperature is too low. Minimum Pressure Valve leaking back to Air End. Minimum Pressure Valve setting is too high. Using wrong type of oil.	Check Intake Valve operation. Repair or replace as required. Stop and restart once ambient increases. Repair or replace the Minimum Pressure Valve. Adjust Minimum Pressure Valve setting to 65 psi. Change to factory recommended oil.



## Trouble Shooting Guide (cont'd)

<b><u>Condition:</u></b>	<b><u>Cause:</u></b>	<b><u>Suggested Correction:</u></b>
E. Intake Valve Leaks Oil When Unit Stops.	<p>Intake Valve Seal leaks.</p> <p>Intake Valve stuck in open position.</p> <p>Blowdown Solenoid not functioning.</p>	<p>Repair using an Intake Valve Repair Kit.</p> <p>Repair or replace the Intake Valve.</p> <p>Replace the Solenoid.</p>
F. Oil Consumption is Too High.	<p>Oil level is too high.</p> <p>Oil Return Line (Scavenge Line) is blocked.</p> <p>Oil Separator is saturated with oil.</p> <p>Wrong type of oil used.</p> <p>Unit is operating at too high a temperature.</p> <p>Oil leak.</p> <p>Unit load is light or excessive load/idle cycles.</p>	<p>Reduce the oil level to the proper level.</p> <p>Clean and/or replace the Scavenge In-Line Filter.</p> <p>Replace the Oil Separator.</p> <p>Change to factory recommended oil.</p> <p>See 'Section C'.</p> <p>Repair oil leak.</p> <p>Ensure Unit is set to operate at correct pressures, and there is a <u>minimum</u> of 10 psi differential. Also the Unit could be oversized for the tank capacity.</p>
G. Compressor Surges.	<p>Restriction in Heat Exchanger or Hoses.</p> <p>Pressure Transducer setting is incorrect or malfunctioning.</p> <p>Blockage at Unit outlet.</p> <p>Dryer is freezing up, not allowing air to pass through.</p> <p>Air Receiver is too small.</p>	<p>Flush out or replace.</p> <p>Set pressure as per instructions or replace.</p> <p>Check for obstructions in outlet piping.</p> <p>Check that the Dryer parameters are correct. Increase dew point to 2.0 if required.</p> <p>Use a minimum 120 Gallon for 7-1/2 to 15 HP Units.</p>
H. High Power Consumption.	<p>Improper air pressure settings.</p> <p>Blowdown Solenoid is not functioning.</p> <p>The voltage in the building is too low or there is a phase imbalance.</p> <p>The Motor is failing.</p>	<p>Reset the pressure as per factory defaults.</p> <p>Inspect or replace as necessary.</p> <p>Contact an Electrician to verify.</p> <p>Have Motor inspected.</p>
I Fault Alarms.	<p>Emergency Stop.</p> <p>High Temperature.</p> <p>Low Temperature.</p> <p>High pressure.</p>	<p>Ensure Emergency Stop Button is not pressed in.</p> <p>See 'Section C'.</p> <p>Ambient temperature is too low. Increase to 10°C.</p> <p>Check the pressure settings, the Pressure Transducer and the wiring to the Transducer.</p>



**Standard Warranty**  
**Oil-Lubricated Rotary Screw**  
**A, B, C, G, H, J, K, and N**

**STANDARD WARRANTY**

DV Systems (the “Company”) warrants to each original retail purchaser (“Purchaser”) of its new products from the Company or its authorized distributor that such products are, at the time of delivery to the Purchaser, free of defects in material and workmanship.

**STANDARD WARRANTY PERIOD**

The Company’s obligation under this warranty is limited to repairing or, at its option, replacing, during normal business hours at an authorized service facility of the Company, any part which in its judgment proved not to be as warranted within the applicable warranty period as follows. **Regular maintenance in accordance with the service manual is required. Use of genuine DV Systems OEM parts and lubricants are highly recommended. If a component failure is deemed a result of using non-genuine DV Systems parts and lubricants, warranty will not be allowed.**

COMPONENT	SERIES	STANDARD WARRANTY COVERAGE	DETAILS
Package	ALL SERIES	12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first	All components within the package, excluding normal wear items
Airend	ALL SERIES	12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first	Normal wearing items, such as shaft seals and inlet valve components, along with the servicing of these items is not covered under the warranty unless deemed as material or workmanship defects. Any disassembly or partial disassembly of the airend, or failure to return the “unopened” airend per Company instructions, will be cause for denial of warranty
Electric Motors	ALL SERIES	12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first	Includes both drive motor and cooling fan motor if applicable. For nonstandard motors, the original manufacturer’s warranty will take precedence.
Package Controller & VFD	ALL SERIES	12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first	Includes package controller and variable frequency drive if applicable
Major Package Components	ALL SERIES	12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first	Includes air/oil reservoir and air/oil cooler
Labor	ALL SERIES	12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first	Service will be provided by Company representative or authorized service personnel, for repair or replacement of any product or part which in the Company’s sole judgment is proved to be as warranted. Labor shall be limited to the amount specified in the Company’s labor rate schedule. All costs of transportation of product, parts, and repaired or replacement parts claimed not to be as warranted to and from such service facilities shall be borne by the Purchaser. The Company may require the return of any part claimed not to be as warranted to one of its facilities as designated by Company, transportation prepaid by Purchaser, to establish a claim under this warranty. Replacement parts provided under the terms of the warranty are warranted for the remainder of the Warranty Period.

**NO WARRANTY IS MADE WITH RESPECT TO:**

1. ANY PRODUCT WHICH HAS BEEN REPAIRED OR ALTERED IN SUCH A WAY, IN THE COMPANY’S SOLE JUDGMENT, AS TO AFFECT THE PRODUCT ADVERSELY
2. ANY PRODUCT WHICH HAS, IN THE COMPANY’S SOLE JUDGMENT BEEN SUBJECT TO NEGLIGENCE, ACCIDENT, IMPROPER STORAGE, OR IMPROPER INSTALLATION OR APPLICATION
3. ANY PRODUCT WHICH HAS NOT BEEN OPERATED OR MAINTAINED IN ACCORDANCE WITH THE RECOMMENDATIONS OF THE COMPANY
4. ANY RECONDITIONED OR PRIOR OWNED PRODUCT

**STANDARD WARRANTY DISCLAIMER**

THE FOREGOING WARRANTY IS EXCLUSIVE AND IT IS EXPRESSLY AGREED THAT, EXCEPT AS TO TITLE, THE COMPANY MAKES NO OTHER WARRANTIES AND HEREBY EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION, EXPRESSED, IMPLIED OR STATUTORY WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. THE REMEDY PROVIDED UNDER THIS WARRANTY SHALL BE THE SOLE, EXCLUSIVE AND ONLY REMEDY AVAILABLE TO PURCHASER AND IN NO CASE SHALL THE COMPANY BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES. UNDER NO CIRCUMSTANCES SHALL THE COMPANY BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOSSES OR DELAYS HOWSOEVER CAUSED. NO STATEMENT, REPRESENTATION, AGREEMENT, OR UNDERSTANDING, ORAL OR WRITTEN, MADE BY ANY AGENT, DISTRIBUTOR, REPRESENTATIVE, OR EMPLOYEE OF THE COMPANY WHICH IS NOT CONTAINED IN THIS WARRANTY WILL BE BINDING UPON THE COMPANY UNLESS MADE IN WRITING AND EXECUTED BY AN OFFICER OF THE COMPANY. THIS WARRANTY SHALL NOT BE EFFECTIVE AS TO ANY CLAIM WHICH IS NOT PRESENTED WITHIN 30 DAYS AFTER THE DATE UPON WHICH THE PRODUCT IS CLAIMED NOT TO HAVE BEEN AS WARRANTED. ANY ACTION FOR BREACH OF THIS WARRANTY MUST BE COMMENCED WITHIN ONE YEAR AFTER THE DATE UPON WHICH THE CAUSE OF ACTION OCCURRED. ANY ADJUSTMENT MADE PURSUANT TO THIS WARRANTY SHALL NOT BE CONSTRUED AS AN ADMISSION BY THE COMPANY THAT ANY PRODUCT WAS NOT AS WARRANTED. WARRANTY IS NOT TRANSFERABLE



**Premium Warranty Plan**  
**Oil-Lubricated Rotary Screw**  
**A, B, C, G, H, J, K, and N Series**

The extended warranty is available on all new DV Systems oil-lubricated rotary screw packages **shipped after October 30<sup>th</sup>, 2020**. To receive the extended airend and package component warranty, the requirements listed below must be performed and documented during the full warranty period. In the event of a claim under this warranty, documentation shall be provided evidencing full compliance with this requirement.

**PREMIUM WARRANTY PLAN PERIOD**

DV Systems (the “Company”) shall warrant the components identified below to be free of defects in material and workmanship for the warranty period. Normal wearing components and servicing of these items is not covered under the premium warranty. The Company’s obligation under this warranty is limited to repairing or, at its option, replacing, during normal business hours at an authorized service partner, any part which in its sole judgment proved not to be as warranted within the applicable warranty period as follows. **Regular maintenance in accordance with the service manual and use of genuine DV Systems OEM parts and lubricants is required.**

COMPONENT	SERIES	PREMIUM WARRANTY COVERAGE	DETAILS
Package	ALL SERIES	12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first	All components within the package, excluding normal wear items
Airend	ALL SERIES	60 months (5 years) from startup or 66 months from date of manufacture, whichever occurs first	Normal wearing items, such as shaft seals and inlet valve components, along with the servicing of these items is not covered under the warranty unless deemed as material or workmanship defects. Any disassembly or partial disassembly of the airend, or failure to return the “unopened” airend per Company instructions, will be cause for denial of warranty
Electric Motor	ALL SERIES	60 months (5 years) from startup or 66 months from date of manufacture, whichever occurs first	Includes three-phase main drive motor. It does not include single-phase motors and cooling fan motors.
Package Controller & VFD	H40-50B	36 months (3 years) from startup or 42 months from date of manufacture, whichever occurs first	Includes package controller and variable frequency drive if applicable
	A, B, C, G, H40-50A, J, K, and N	60 months (5 years) from startup or 66 months from date of manufacture, whichever occurs first	Includes variable frequency drive if applicable. It does not include package controller.
Major Package Components	ALL SERIES	60 months (5 years) from startup or 66 months from date of manufacture, whichever occurs first	Includes air/oil reservoir and air/oil cooler
Labor	H40-50B	Package: 12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first  Package Controller & VFD: 36 months (3 years) from startup or 42 months from date of manufacture, whichever occurs first  Airend / Major Package Components (Excludes Motor): 60 months (5 years) from startup or 66 months from date of manufacture, whichever occurs first	Service will be provided by Company representative or authorized service personnel, for repair or replacement of any product or part which in the Company’s sole judgment is proved to be as warranted. Labor shall be limited to the amount specified in the Company’s labor rate schedule. All costs of transportation of product, parts, and repaired or replacement parts claimed not to be as warranted to and from such service facilities shall be borne by the Purchaser. The Company may require the return of any part claimed not to be as warranted to one of its facilities as designated by Company, transportation prepaid by Purchaser, to establish a claim under this warranty. Replacement parts provided under the terms of the warranty are warranted for the remainder of the Warranty Period.
	A, B, C, G, H40-50A, J, K, and N	Package / Package Controller: 12 months (1 year) from startup or 18 months from date of manufacture, whichever occurs first  Airend / VFD / Major Package Components (Excludes Motor): 60 months (5 years) from startup or 66 months from date of manufacture, whichever occurs first	



**PREMIUM WARRANTY PLAN REQUIREMENTS**

1. The Package Unit must be registered with the manufacturer within 30 days from the date of purchase. This is done by completing the Warranty Registration online at '[gdg.gardnerdenver.com/DV-Rotary-Warranty](http://gdg.gardnerdenver.com/DV-Rotary-Warranty)'.
2. Use of **Genuine DV Systems OEM parts and lubricant (or warranty kits)** as specified in the service manual must be purchased from an authorized DV Systems distributor. **Maintenance shall be performed in accordance to the recommended maintenance schedule found in the service manual for the appropriate compressor package.** Consult the service manual for proper maintenance intervals for the operating hours of the equipment.
3. The use of approved DV Systems lubricants is required. The following lubricants are approved for warranty and must be changed in accordance with the above maintenance tables or a **minimum of every 12 months**. Oil filter and separator elements must be replaced at the time of the lubricant change.

**DEV-3000, DEV-3500 (Food Grade Synthetic)**

4. A log of all maintenance performed must be maintained with the corresponding operational hours. This includes the following changes: air filter, oil filter, separator, and lubricant. All other maintenance and repairs also require logging and documentation with corresponding hours.

**PREMIUM WARRANTY PLAN DISCLAIMER**

DV SYSTEMS RESERVES THE RIGHT TO CHANGE THE PREMIUM WARRANTY PLAN AND/OR REQUIREMENTS AS DEEMED APPROPRIATE BY THE COMPANY. DV SYSTEMS RESERVES THE RIGHT TO REFUSE PARTICIPATION IN THE PREMIUM WARRANTY PLAN TO ANY DISTRIBUTOR AND/OR END CUSTOMER OF THE COMPRESSOR. THIS PREMIUM WARRANTY PLAN IS SUPPLEMENTAL TO THE STANDARD WARRANTY. COMPANY MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND, EITHER EXPRESS OR IMPLIED. THE FOREGOING WARRANTY IS EXCLUSIVE AND IT IS EXPRESSLY AGREED THAT, EXCEPT AS TO THE TITLE, COMPANY MAKES NO OTHER WARRANTIES EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY. THIS WARRANTY SHALL NOT BE EFFECTIVE AS TO ANY CLAIM WHICH IS NOT PRESENTED WITHIN 30 DAYS AFTER THE DATE UPON WHICH THE PRODUCT IS CLAIMED NOT TO HAVE BEEN AS WARRANTED. ANY ACTION FOR BREACH OF THIS WARRANTY MUST BE COMMENCED WITHIN ONE YEAR AFTER THE DATE UPON WHICH THE CAUSE OF ACTION OCCURRED.

**NO WARRANTY IS MADE WITH RESPECT TO:**

1. ANY PRODUCT WHICH HAS BEEN REPAIRED OR ALTERED IN SUCH A WAY, IN THE COMPANY'S SOLE JUDGMENT, AS TO AFFECT THE PRODUCT ADVERSELY
2. ANY PRODUCT WHICH HAS, IN THE COMPANY'S SOLE JUDGMENT BEEN SUBJECT TO NEGLIGENCE, ACCIDENT, IMPROPER STORAGE, OR IMPROPER INSTALLATION OR APPLICATION
3. ANY PRODUCT WHICH HAS NOT BEEN OPERATED OR MAINTAINED IN ACCORDANCE WITH THE RECOMMENDATIONS OF THE COMPANY
4. ANY RECONDITIONED OR PRIOR OWNED PRODUCT